



HOW TO MIX TOCKAY PIGMENTS FOR WALL PAINT AND PLASTERS

This procedure is valid for all Tockay paints and plasters, except for GekkkoSOL Velvet and GekkkoSOL Textured paints, for which GekkkoSOL Thinner must be used.




1. Weigh the pigments.



2. Add demineralized water – about half of the weight of the pigment (e.g. 500 ml of water to 1 kg of pigments).



3. Mix the pigments using a hand mixer or a wooden stirrer, until the pigment mixture is smooth and thick.

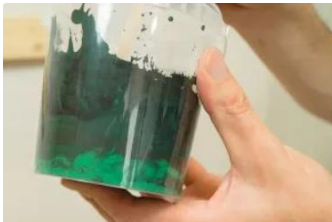

4. Using a wooden stirrer or similar, stir the pigments at the bottom of the container until they form a consistent paste.



5. Add the pigment mixture to the paint.



6. Using the stirrer, stir the pigment mixture evenly into the paint.



7. Apply the paint and leave to dry.



8. Paints and plasters are considerably darker when wet and become brighter as they dry.

This is an example of exactly the same paint, freshly applied on the left and fully dried on the right.

